

INSTALLATION OF 45 R.P.M. SPINDLE

The 45 R.P.M. spindle can be installed quite easily by following the listed procedures.

1. Place the 45 R.P.M. spindle cushion over the small spindle and drop it down to the turntable (See Fig. 2).
2. Completely depress the pressure plate with your index finger and thread the 45 R.P.M. spindle over the small diameter spindle on the record changer (See Figs. 2 and 3).

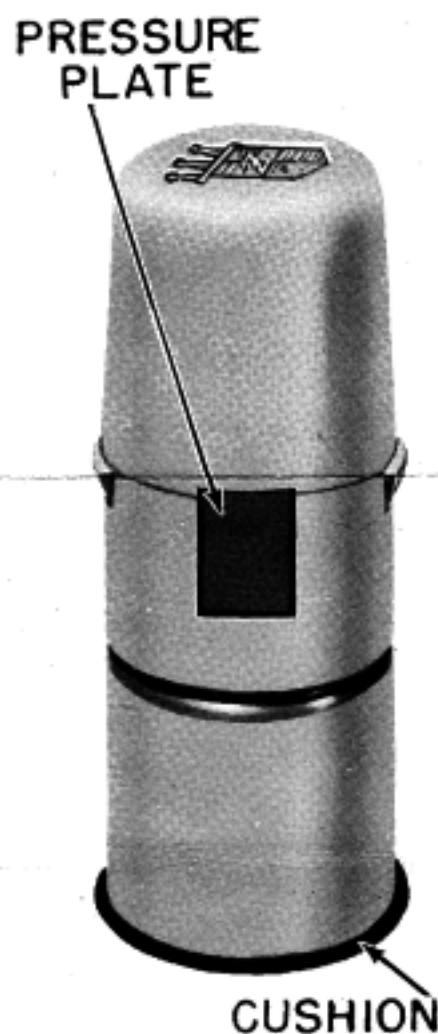


Figure 1. 45 R.P.M. spindle.

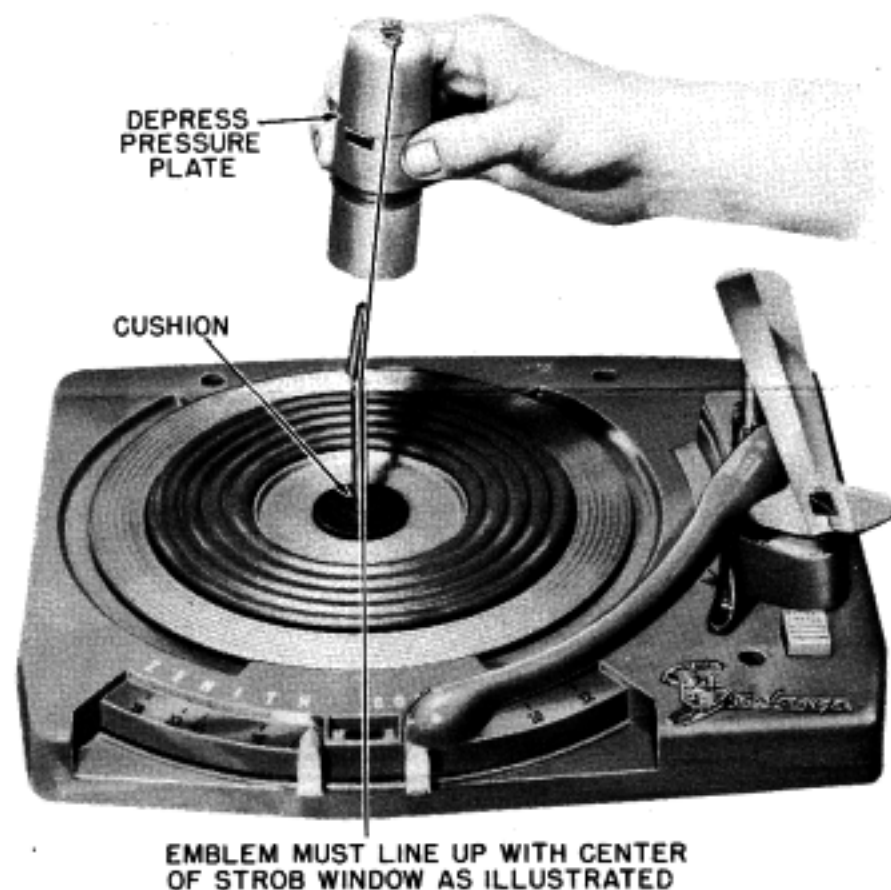


Figure 2. Placing 45 R.P.M. spindle on changer.

3. It is extremely important that the emblem line up with the center of the strob window as illustrated in (Figs. 2 and 3). If the emblem is not lined up properly, the 45 R.P.M. spindle will not change records.

4. When the 45 R.P.M. spindle is over the small diameter spindle and firmly seated on the cushion, with the emblem lined up with the center of the strob window as illustrated, the pressure plate can be released. (See Fig. 3).



EMBLEM MUST LINE UP WITH CENTER
OF STROB WINDOW AS ILLUSTRATED

Figure 3. 45 R.P.M. spindle installed on changer.

5. The 45 R.P.M. spindle can be removed from the record changer by completely depressing the pressure plate, lifting and agitating it until it has been removed.

45 R.P.M. OPERATION

1. Place a stack of 45 R.P.M. records (up to 10) over the 45 R.P.M. spindle and allow them to come to rest on the record supports.
2. Place the speed shift lever in 45 R.P.M. position.
3. Place the size selector lever in 7" position.
4. Press the record change button.
5. After the stack of records has been played all that is necessary to remove them is to lift the entire stack off the changer.

FREE DOWNLOAD - NOT FOR RESALE



**Publication Provided By
Steve's Antique Technology**

www.StevenJohnson.com